

REV 004



Quick

TM

Manuale d'uso



**CASSETTA TELERUTTORI
CASSETTA TELEINVERTITORI**

T 501 - T 502 - T 510 - T 520
T 503 - T 504 - T 530 - T 540

User's manual



**SOLENOIDS UNIT
REVERSING SOLENOIDS UNIT**

T 501 - T 502 - T 510 - T 520
T 503 - T 504 - T 530 - T 540

Manuel de l'utilisateur



**BOITIER RELAIS TELERUPTEUR
BOITIER RELAIS TELEINVERSEUR**

T 501 - T 502 - T 510 - T 520
T 503 - T 504 - T 530 - T 540

Benutzerhandbuch



**RELAIS BOX
TELEINVERTER**

T 501 - T 502 - T 510 - T 520
T 503 - T 504 - T 530 - T 540


Manual del usuario



**CAJA DE LOS TELERUPTORES
CAJA DE LOS TELEINVERTIDORES**

T 501 - T 502 - T 510 - T 520
T 503 - T 504 - T 530 - T 540

TIPO TYPE TYPE TYP TIPO	MODELLO MODEL MODÈLE MODELL MODELO	POTENZA MOTORE MOTOR POWER PUISSANCE MOTEUR MOTORLEISTUNG POTENCIA MOTOR MAX	TENSIONE DI ALIMENTAZIONE BOBINA COIL SUPPLY VOLTAGE TENSION D'ALIMENTATION BOBINE SPULE VERSORGUNGSSPANNUNG TENSIÓN DE ALIMENTACIÓN DE LA BOBINA
CASSETTA TELERUTTORI SOLENOIDS UNIT BOITIER RELAIS TELERUPTEUR RELAIS BOX CAJA DE LOS TELERUPTORES	T501	1500 W	12 V
	T502	2000 W	24 V
	T510	2500 W	12 V
	T520	3500 W	24 V
CASSETTA TELEINVERTITORI REVERSING SOLENOID UNIT BOITIER RELAIS TELEINVERSEUR TELEINVERTER CAJA DE LOS TELEINVERTIDORES	T503	1500 W	12 V
	T504	2000 W	24 V
	T530	2500 W	12 V
	T540	3000 W	24 V

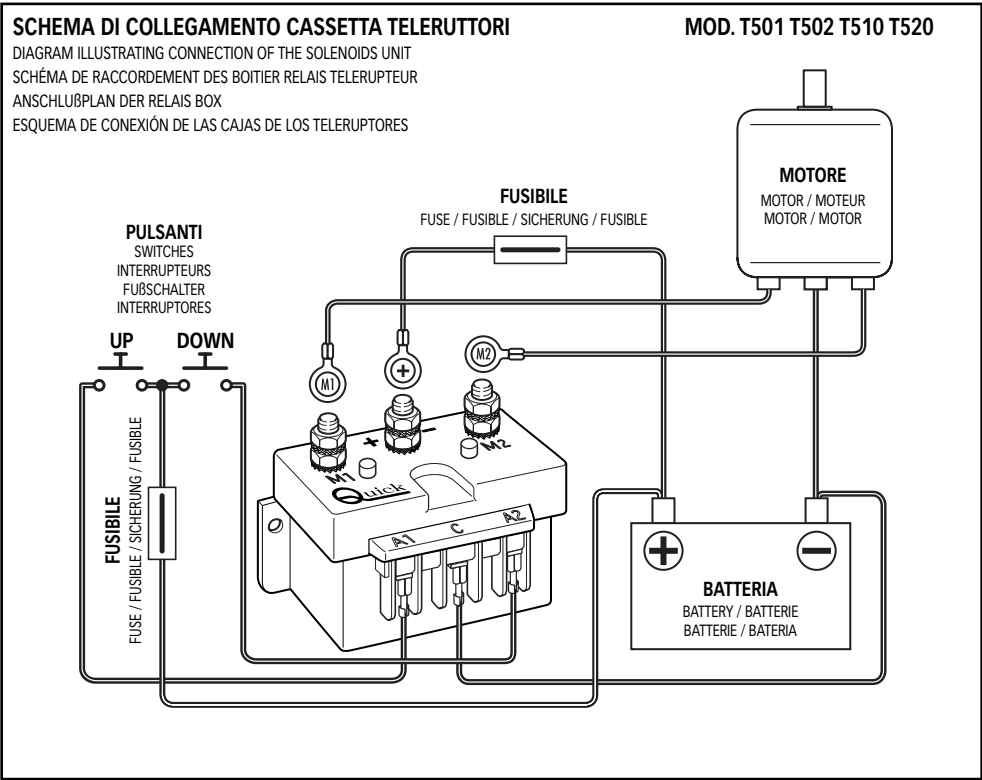

SCHEMA DI COLLEGAMENTO CASSETTA TELEINVERTITORI



MOD. T503 T504 T530 T540

DIAGRAM ILLUSTRATING CONNECTION OF THE REVERSING SOLENOIDS UNIT

SCHEMA DE RACCORDEMENT DES BOITIER RELAIS TELEINVERSEUR

ANSCHLUßPLAN DER TELEINVERTER

ESQUEMA DE CONEXIÓN DE LAS CAJAS DE LOS TELEINVERTIDORES

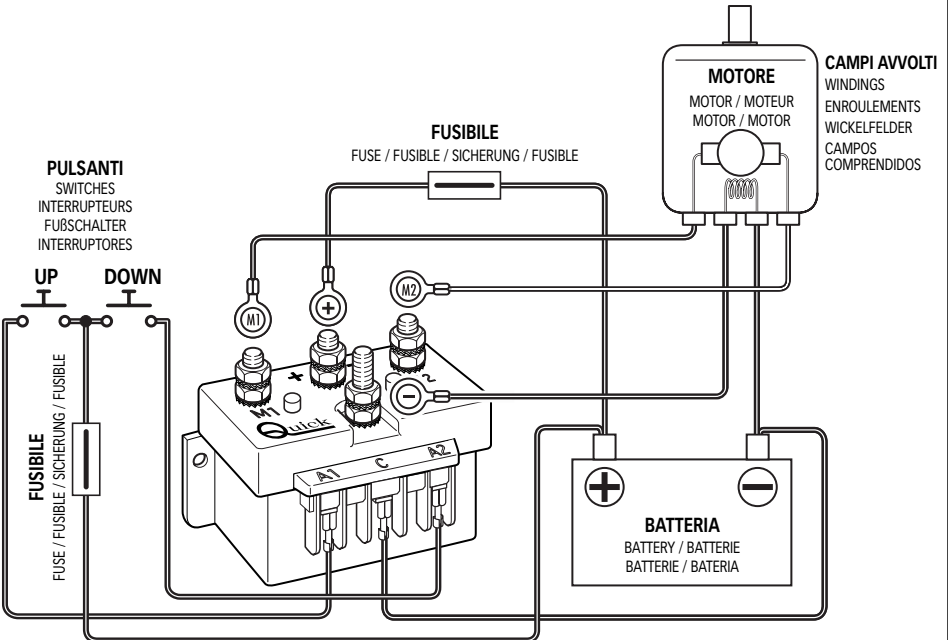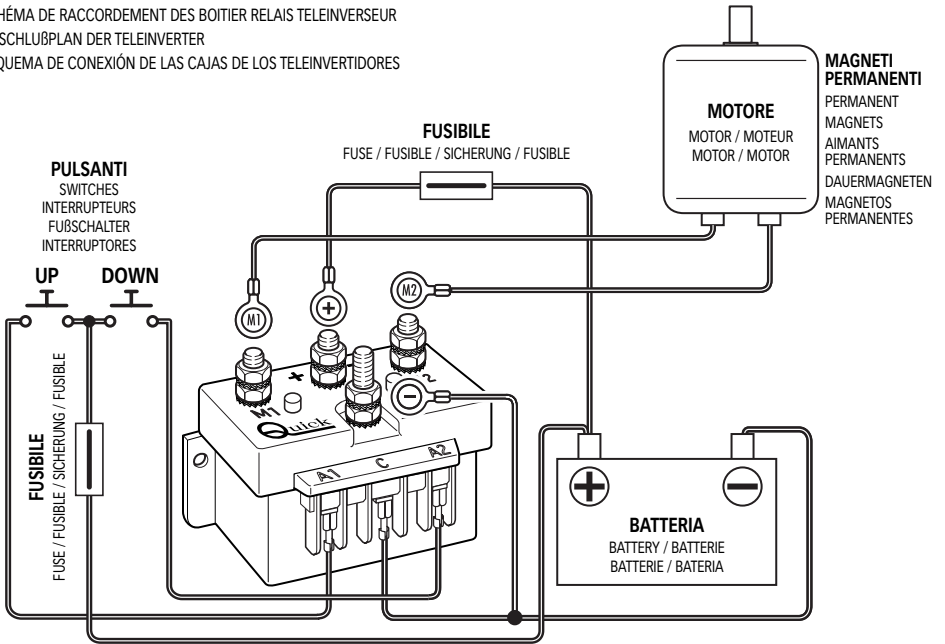



QUICK - VIA PIANGIPANE , 120/A - 48020 PIANGIPANE (RAVENNA) - ITALY
TEL. +39.0544.415061 - FAX +39.0544.415047

WWW.QUICKITALY.COM - E-MAIL: QUICK@QUICKITALY.COM